

ROLL SPLITTER ATTACHMENT

The Accu-Cut Roll Splitter provides a simple yet effective tool for splitting carpet and vinyl on your Accu-Cut Cut & Roll Machine. Detailed below are specifications for assembling and operating the Roll Splitter. Should you have any questions concerning your roll splitter please call **1-800-ACCUCUT** (1-800-222-8288).



ASSEMBLY & OPERATION

- Place the cutter head in the desired position with the blade facing the carpet.
- Using a tape measure, position the splitter so the material will be cut to the desired width.
- Advance the material to roll splitter and pull on the material for the first few feet – if your machine is equipped with variable speed control set the speed at the lowest setting.
- Continue advancing the material into the roll-up cradle keeping the outside edge of the material flush with the guide handle.

Note: If you are measuring the piece you are splitting reset your counter to zero when the material is centered with the cutting track.